

ISTRUZIONI MONTAGGIO COPRI INIETTORI V7850 | V7III | V9


ATTREZZI:

- CHIAVE ESAGONALE 4MM – 3MM – 2,5 MM

- 1- RIMUOVERE I COPRI INIETTORI ORIGINALI IN PLASTICA CON LA CHIAVE ESAGONALE DA 4MM

NB: PUO' CAPIRE CHE LA VITE RIMANGA SOLIDALE AL SUPPORTO FILETTATO METALLICO E RUOTI NELLA SEDE DEL TUBO IN GOMMA. UTILIZZARE DELLE PINZE, IN MODO DA IMPEDIRE LA ROTAZIONE E POTER QUINDI RIMUOVERE LA VITE

- 2- FISSARE I NUOVI SUPPORTI ALLA MOTO MEDIANTE LA CHIAVE ESAGONALE DA 3MM ED APPLICARE DEL BLOCCA FILETTI MEDIO (POCO).

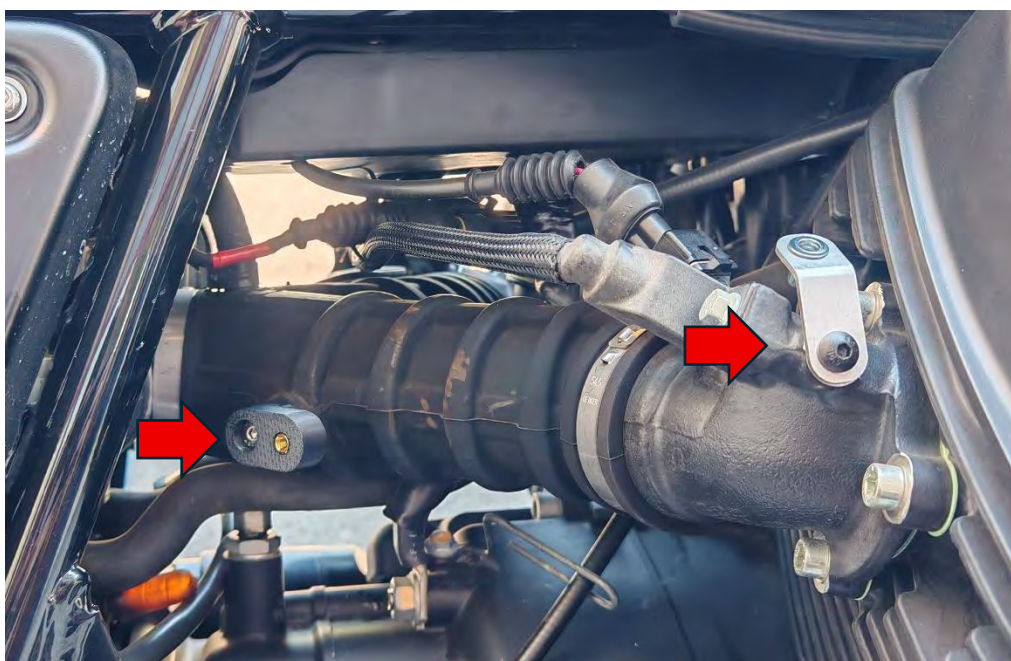

- 3- UTILIZZARE LE VITI IN DOTAZIONE, M4*6 ED M4*10, PER FISSARE IL COPRI INITTORE RVRS.
- 4- INSTALLAZIONE FINITA

RVRS[®]

INSTALLATION INSTRUCTIONS FOR INJECTOR COVERS V7850 | V7III | V9


TOOLS:

- HEX KEY 4MM – 3MM – 2.5MM

1- REMOVE THE ORIGINAL PLASTIC INITIALISER COVERS USING THE 4MM HEX KEY

NB: YOU MAY FIND THAT THE SCREW REMAINS FIXED TO THE METAL THREADED BRACKET AND ROTATES WITHIN THE RUBBER TUBE SLEEVE. USE PLIERS TO PREVENT IT FROM ROTATING SO THAT YOU CAN THEN REMOVE THE SCREW

2- FIX THE NEW MOUNTS TO THE MOTORCYCLE USING THE 3MM HEX KEY AND APPLY A SMALL AMOUNT OF MEDIUM-STRENGTH THREADLOCK.

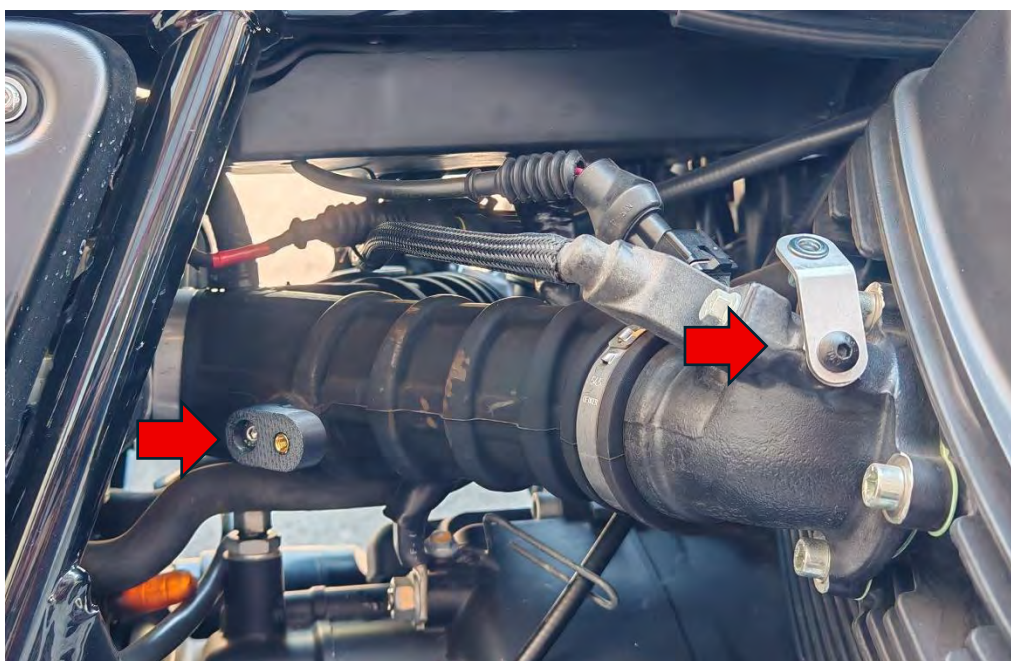

3- USE THE SUPPLIED SCREWS, M4×6 AND M4×10, TO SECURE THE RVRS INJECTOR COVER.

4- INSTALLATION COMPLETE

RVRS[®]